

**"SALTO" TRAMPOLINE
FOR TRAINING**

**5080 - 5082
5084 - 5086**

**KEEP THIS
DOCUMENT**



Warning:

This equipment should be installed by a qualified individual.

The apparatus should be used by only one person at a time, supervised by a qualified individual and with appropriate landing mats.

Using this equipment for purposes other than those originally intended is not allowed.

Recommendations:

As shown in French Standard NF S 52-400 the following is recommended:

- keep these instructions for subsequent reference (inspection, maintenance, etc.).
- periodically carry out predictive maintenance.
- depending on how much it is used, have the equipment serviced yearly or every few years.


Packaging:

Package Ref.	5080/00 Central bars (2) of frame + Cables (2)	5080/20 Corners of frame (4) + Support struts (4)	5080/30 Corners of feet (4) + Sleeves (4)	5082 Salto Sportex jumping Bed	5084/00 Set of 43 Springs	5086 Protection pads	No. of Packages
5080 Salto Trampo	1	1	1	1	2	1	7
Volume (m³)	0,0869	0,5924	0,5924	0,1620	0,0181	0,140	X
Weight (kg)	14	30	31	7	15	10	
Dimensions (mm)	2070 x 210 x 200	1640 x 1290 x 280	1640 x 1290 x 280	1800 x 300 x 300	360 x 280 x 180	2800 x 500 x 100	

Trampoline assembly (minimum of two people required) :

Note: Prepare a clean area to assemble the equipment.

- 1** - Assemble the frame on the floor, pay attention to:
 - position the frame corners **(1)** : the welded screws along the trampoline,
 - fit the 2 frame corners together **(1)** on each sleeve **(2)** to form the 2 ends of frame,
 - position the 2 central bars of frame **(3)** : the spring attachment toward inside, and the feet fixations towards the top.
 - fit the 2 central bars of frame **(3)** between the 2 ends of frame.
- 2** - Assemble the 2 feet on the floor : fit the parts of the 2 corners of feet **(4)** having a welded ring onto a sleeve **(2)** each complete foot.
- 3** - Assemble the 4 support struts **(5)** on the frame with 4 nuts **(6)**:
 - Well position the open part of support struts **(5)** towards the top and the feet.
 - Slightly tighten to let the support struts **(5)** turn without clearance.
- 4** - Assembly the feet onto the frame with the screws **(8)** and the nuts **(6)** :
 - The screws **(8)** are placed from the outside to have nuts **(6)** towards inside of trampoline.
 - Slightly tighten to let the feet turn without clearance.
- 5** - Hook each support strut **(5)** on the welded screw on the matching corner foot **(4)** lock it with knurled nut **(7)** well tightened.
- 6** - Attach the holding cables **(9)** to the welded rings of the corners feet **(4)**. Lock the quick links **(10)** again.
- 7** - Turn the trampoline on its feet.
- 8** - Position the bed **(11)** in the middle of the frame with 3 springs **(12)** per corner.
- 9** - Assemble the springs **(12)** simultaneously on both sides lengthways in beginning at one end.
- 10** - Do the same for sideways.
- 11** - Place the long protection pads **(16)** by passing the 4 "button" sandow **(17)** around the frame.
- 12** - Attach the large protection pads **(15)** on the long ones **(16)** with "velcro" strips.

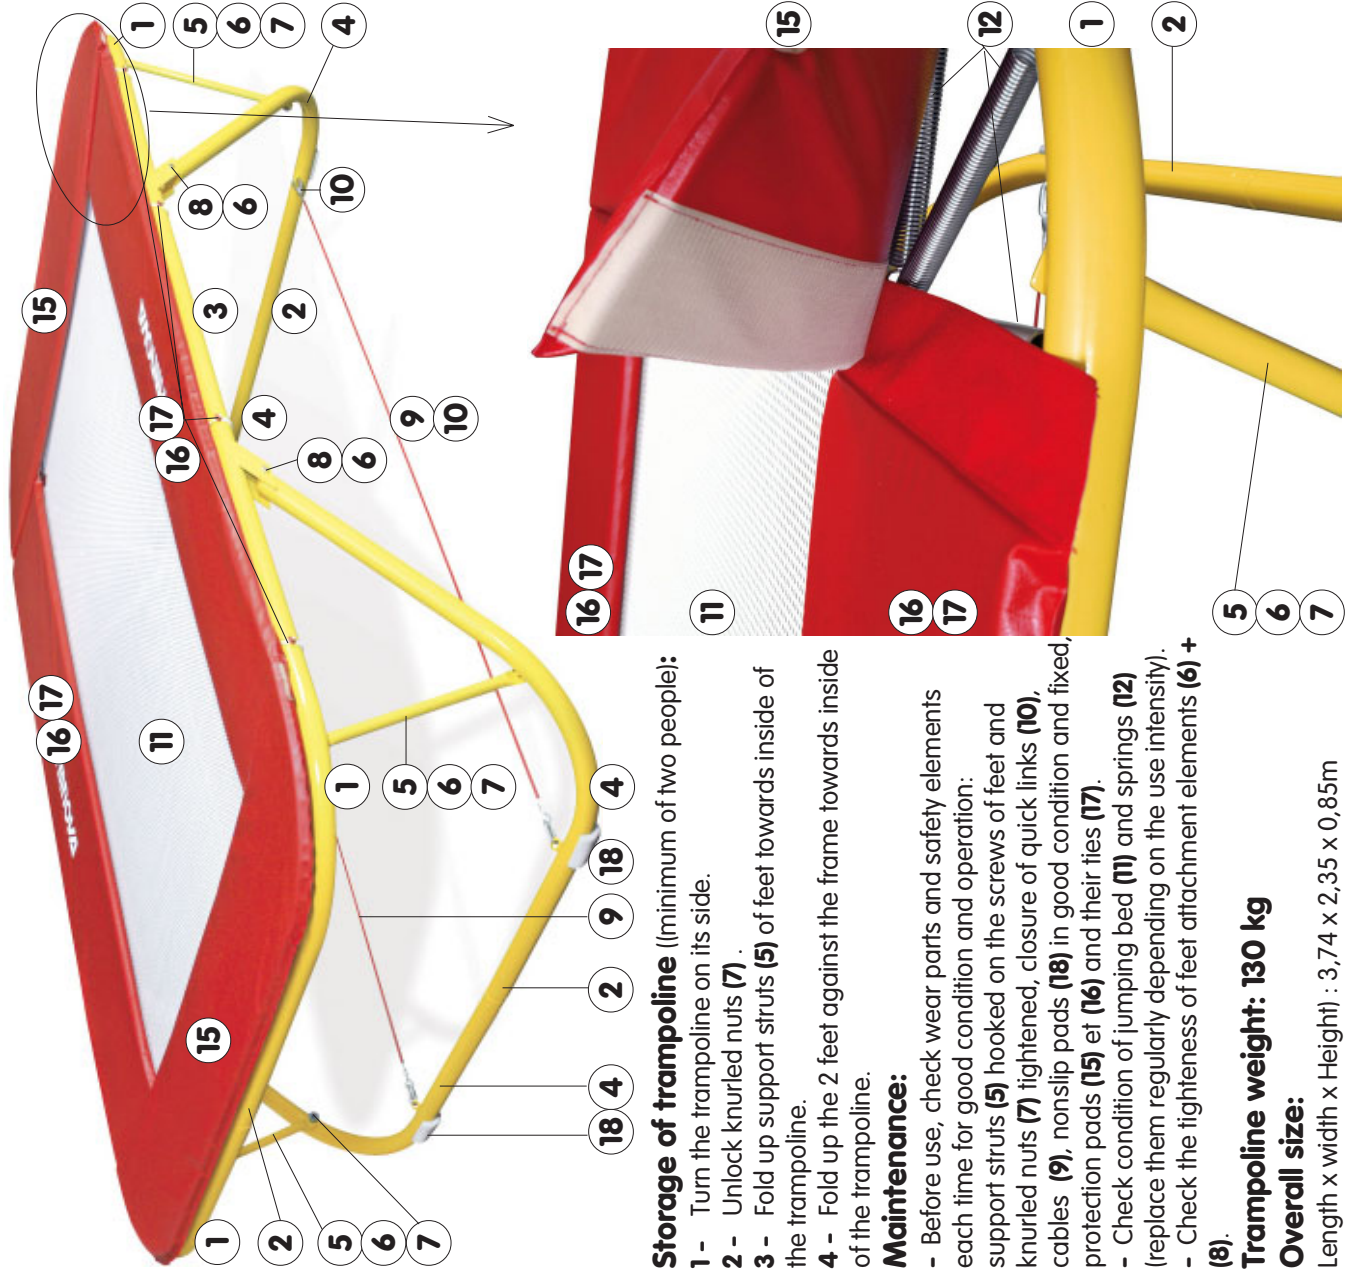

Storage of trampoline (minimum of two people):

- 1 - Turn the trampoline on its side.
- 2 - Unlock knurled nuts (7) .
- 3 - Fold up support struts (5) of feet towards inside of the trampoline.
- 4 - Fold up the 2 feet against the frame towards inside of the trampoline.

Maintenance:

- Before use, check wear parts and safety elements each time for good condition and operation:
- support struts (5) hooked on the screws of feet and knurled nuts (7) tightened, closure of quick links (10), cables (9), nonslip pads (18) in good condition and fixed, protection pads (15) et (16) and their ties (17).
- Check condition of jumping bed (11) and springs (12) (replace them regularly depending on the use intensity).
- Check the tightness of feet attachment elements (6) + (8).

Trampoline weight: 130 kg

Overall size:

Length x width x Height) : 3,74 x 2,35 x 0,85m

30	-	-	-	-
29	-	-	-	-
28	-	-	-	-
27	-	-	-	-
26	-	-	-	-
25	-	-	-	-
24	-	-	-	-
23	-	-	-	-
22	-	-	-	-
21	-	-	-	-
20	-	-	-	-
19	-	-	-	-
18	4	Trampoline nonslip pad	5210/65	included in 4
17	8	Lg. 200 "buffon" sandow	SLG04200BC	included in 16
16	2	Long protection pad	5086/10	included in 16
15	2	Large protection pad	5086/20	included in 16
14	1	th. 3cm complete protection	5086	package
13	1	Salto set of 84 springs	5084	2 pack. 5084/00
12	86	Trampoline spring	5250/15	included in 13
11	1	2,90 x 1,50m Sportex bed	5082	per unit
10	4	N°8 Quick link	QMRA00008Z	included in 9
9	2	holding cables	5080/13	per unit
8	4	M12 x 90 H screw	VH0012090Z	per unit
7	4	knurled nut	5080/14	per unit
6	8	M12 H Locknut	VEHF12000Z	per unit
5	4	Foot support strut	5080/12	per unit
4	4	Foot corner	5080/03	per unit
3	2	Central bar of frame	5080/01	per unit
2	4	Frame & feet sleeve	5080/11	per unit
1	4	Frame corner	5080/02	per unit



RUE GASTON DE FLOTTE
13012 MARSEILLE
Tél. : 33-(0)-4-91-87-51-20
Fax : 33-(0)-4-91-93-86-89

**"SALTO" TRAMPOLINE
FOR TRAINING**

BY : J. BRIOT

DATE : 04/11/14

NW63b

Ref. : 5080 - 5082 - 5084 - 5086